

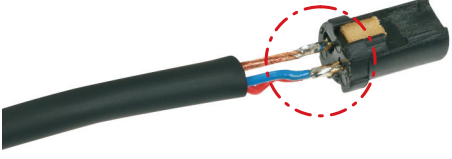
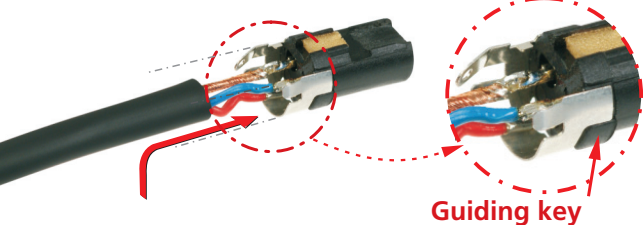






# ASSEMBLY INSTRUCTION

## TINY xlr | Cable Connector - RT\*FC-B & RT\*FC-B-W

- (A)**  Slide the rubber sealing (1) (RT\*FC-B-W only) and the boot (2) onto the cable.
- (B)**  Prepare cable as shown.
- (C)**  Insert wires into the terminals and solder them.
- (D)**  Apply the grounding to the cable and position it on the insert.  
**Attention: Pay attention to the key.**
- (E)**  Grounding Option: Ground with housing, solder #1 to the solder lug of the grounding.
- (F)**  Put chuck onto the cable.  
**Attention: Pay attention to the guiding key.**
- (G)**  Slide insert and chuck together into the housing.
- (H)**  Screw the bushing onto the connector.  
The RT\*FC-B type is ready.

Rubber sealing assembly on page 2.

**SINGLE BAG PACKAGING:**

The rubber sealing can be easily applied by hand.



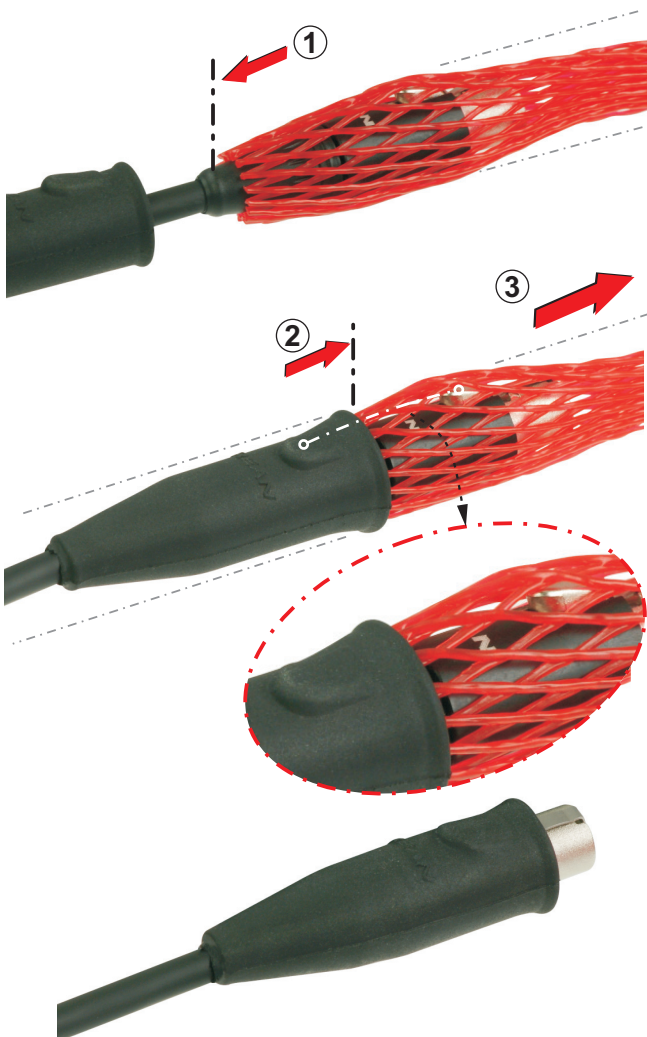
**Attention: Pay attention to the position of the latch (see the picture).**

► Finish



**BULK PACKAGING:**

For large quantity assemblies an assembly hose is supplied with bulk packaging (-D).



① Put the assembly hose onto the connector over the end of the boot (as shown in picture).

② Push the rubber sealing onto the assembly aid.

**Attention: Pay attention to the position of the latch (see the picture).**

③ Hold the cable and pull the assembly tool jerkily off the connector (the sealing jacket is pulled in position).

► Finish

NEUTRIK AG LI T: +423 / 237 24 24 F: +423 / 232 53 93  
 NEUTRIK USA Inc. USA T: +1 732 / 901 9488 F: +1 732 / 901 9608  
 NEUTRIK (UK) Ltd. UK T: +44 1983 / 811 441 F: +44 1983 / 811 439  
 NEUTRIK Vertriebs GmbH DE/NL/AT/DK T: +49 8131 / 280 890 F: +49 8131 / 280 830

NEUTRIK France FR T: +33 1 / 4131 6750 F: +33 1 / 4131 0511  
 NEUTRIK Tokyo Ltd. JP T: +81 3 / 3663 4733 F: +81 3 / 3663 4796  
 NEUTRIK Hong Kong Ltd. HK T: +852 / 2687 6055 F: +852 / 2687 6052